QUICK REFERENCE GUIDE MAAS-ROWE DIGITAL CHRONOBELL II CD 7

Creating a CD Library: Press *SP*. Press *AUX 4.* The display will display *LIb I*. Press *FWD* or *BACK* until you get the library number that you want to work with. Press *SET*. Next the display will display dashes if the library is empty, *otherwise a disk and song number is displayed*. Press *ENTER*, a disk number and song number will be displayed. The disk number will be flashing. Press *FWD* or *BACK* until you get the desired disk number. Press *SET*. Next the song number is flashing 1. Press *FWD* or *BACK* until you get the desired song number. Press *SET*. Repeat this until all of the desired songs have been entered into the desired library.

DO NOT MOVE DISKS BETWEEN TRAYS!!! NOT ALL DISKS CONTAIN THE SAME NUMBER OF SONGS. MOVING DISKS BETWEEN TRAYS CAN CAUSE ERRORS IN THE SYSTEMS NORMAL OPERATION AND MAY REQUIRE A SERVICE CALL!!!

Creating an Event List: Press SP. Press Aux. The display will display EL 1 with the number 1 flashing. Press BACK until the display reads 99. Press SET. Next the display should display 99 --.

Press *ENTER*. Press *Player 4*. Next you are prompted to select a disk number. Press *FWD* or *BACK* until you get the desired disk number. Press *SET*. Next you are prompted to select a song number. Press *FWD* or *BACK* until you get the desired song number. Press *SET*. Repeat these steps from "Press *Player 4*" to enter more songs. Press *STOP* when you are done.

Create a Special Event Day i.e. Holiday: Press *ENTER*. Press *HOL*. Press *BACK* until the display flashes *H 50*. Press *SET*. Next your being prompted for a month. Press the *FWD* or *BACK* until you get the desired month. Press *SET*. Next your being prompted for a day. Press set. Press the *FWD* or *BACK* until you get the desired day. Press *SET*. Next your being prompted for a year. Press the *FWD* or *BACK* until the display flashes 2000. Press *SET*.

Scheduling Events Within a Holiday: Press *ENTER*. Press *Aux*, the display will display E 1. Press *BACK* until the display reads 99. Press *SET*. Press *HOL*. Press *BACK* until the display flashes *H 50*. Press *SET*. Next your being prompted for the time "hour". Press the *FWD* or *BACK* until you get the desired hour. Press *SET*. Next your being prompted for the minute. Press the *FWD* or *BACK* until you get the desired minute. Press *SET*. Repeat the steps from "Press AUX" to add more events. Press *STOP* when finished.